

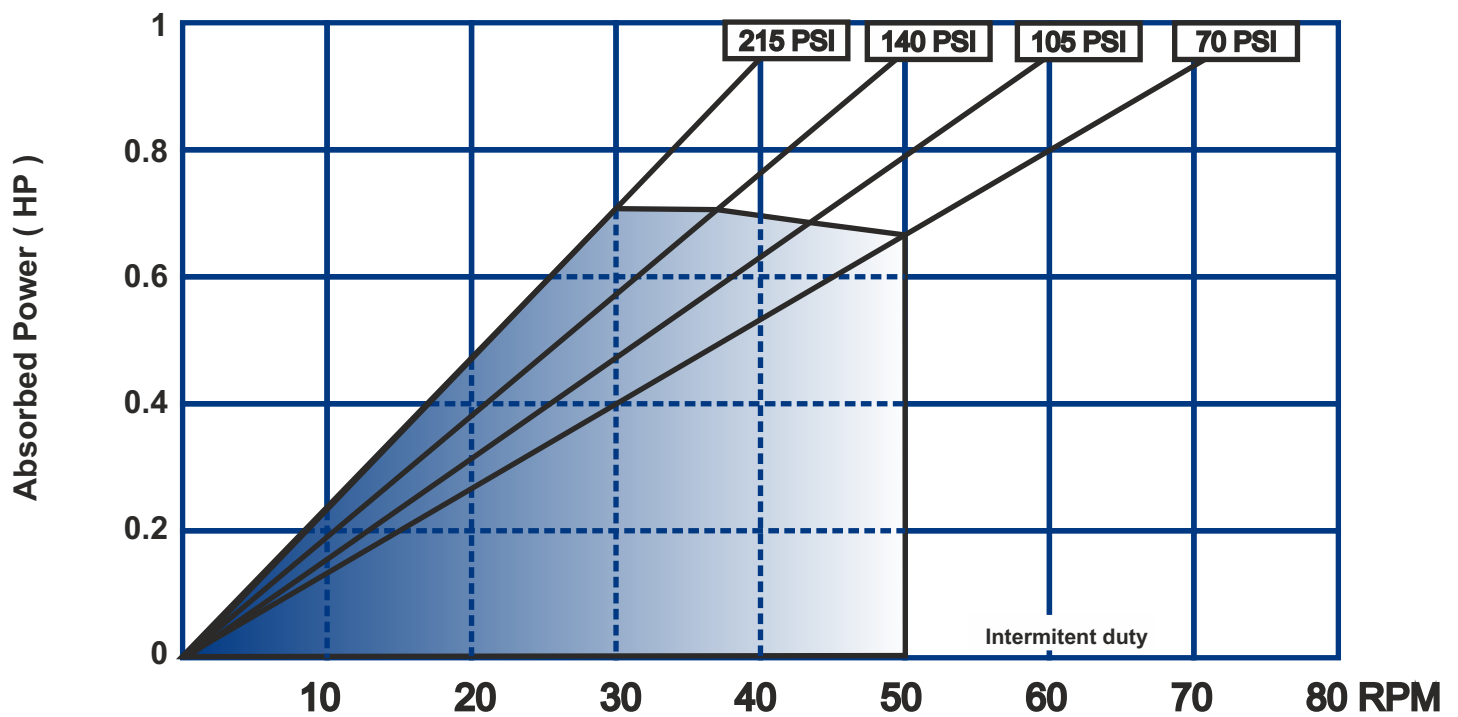
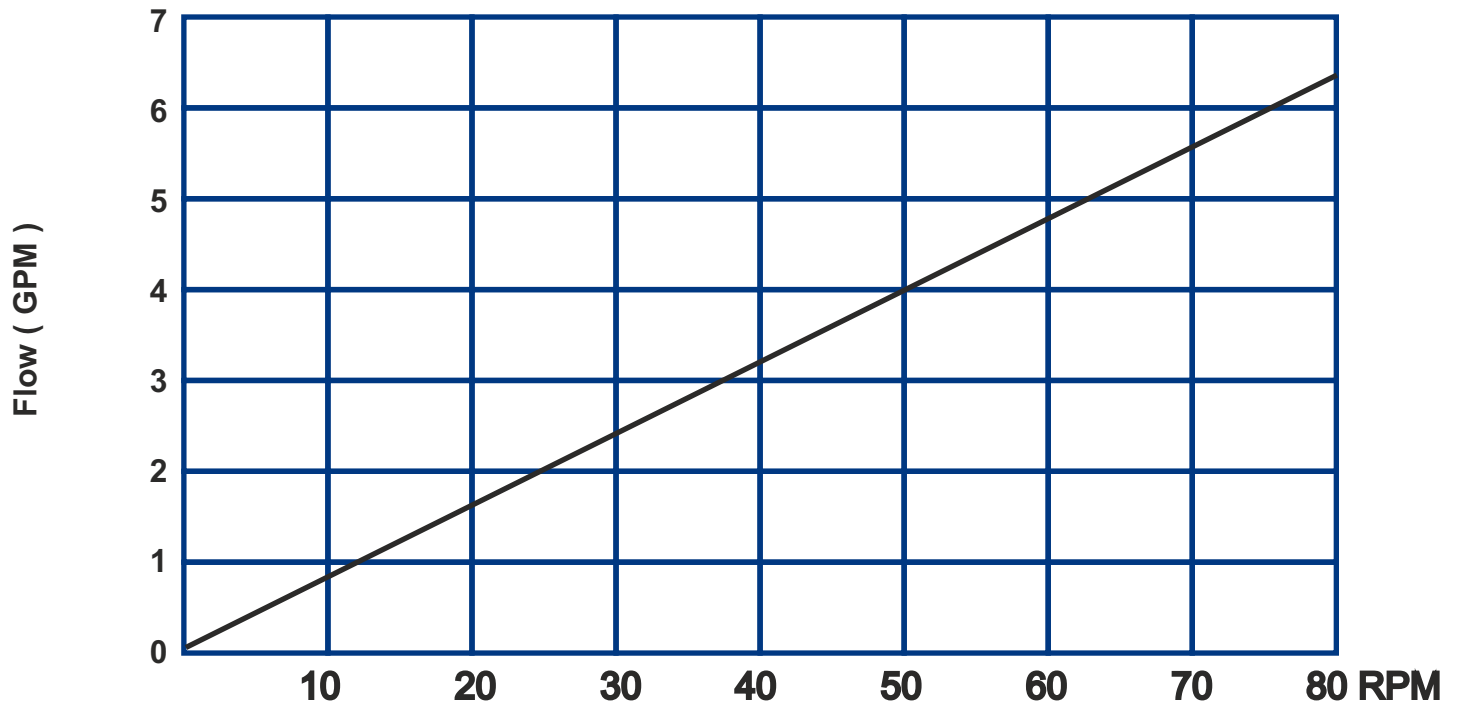


Performance curve - Model STP-25

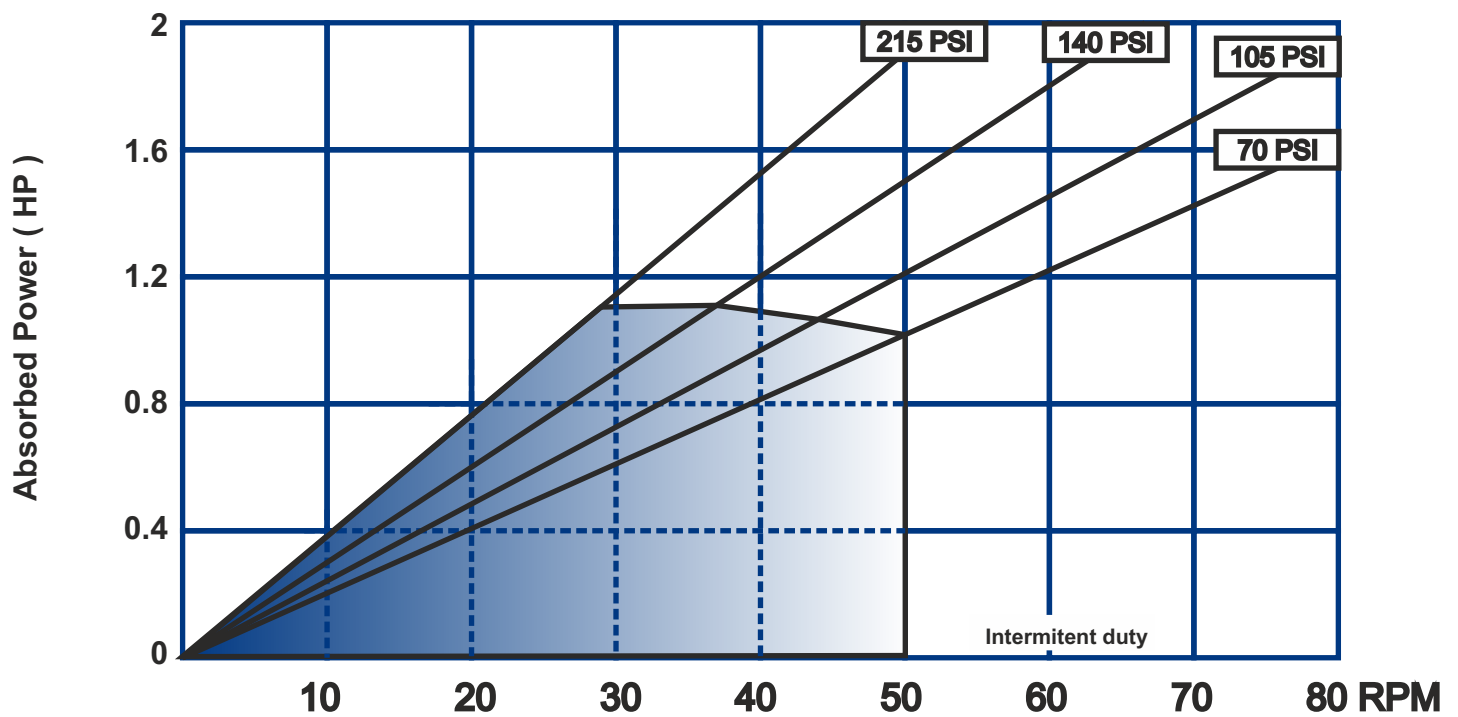

Pressure (PSI)	Nominal Torque (in·lbf)
Minimum starting torque	1000
70	1000
105	1000
140	1200
215	1550



Performance curve - Model STP-32

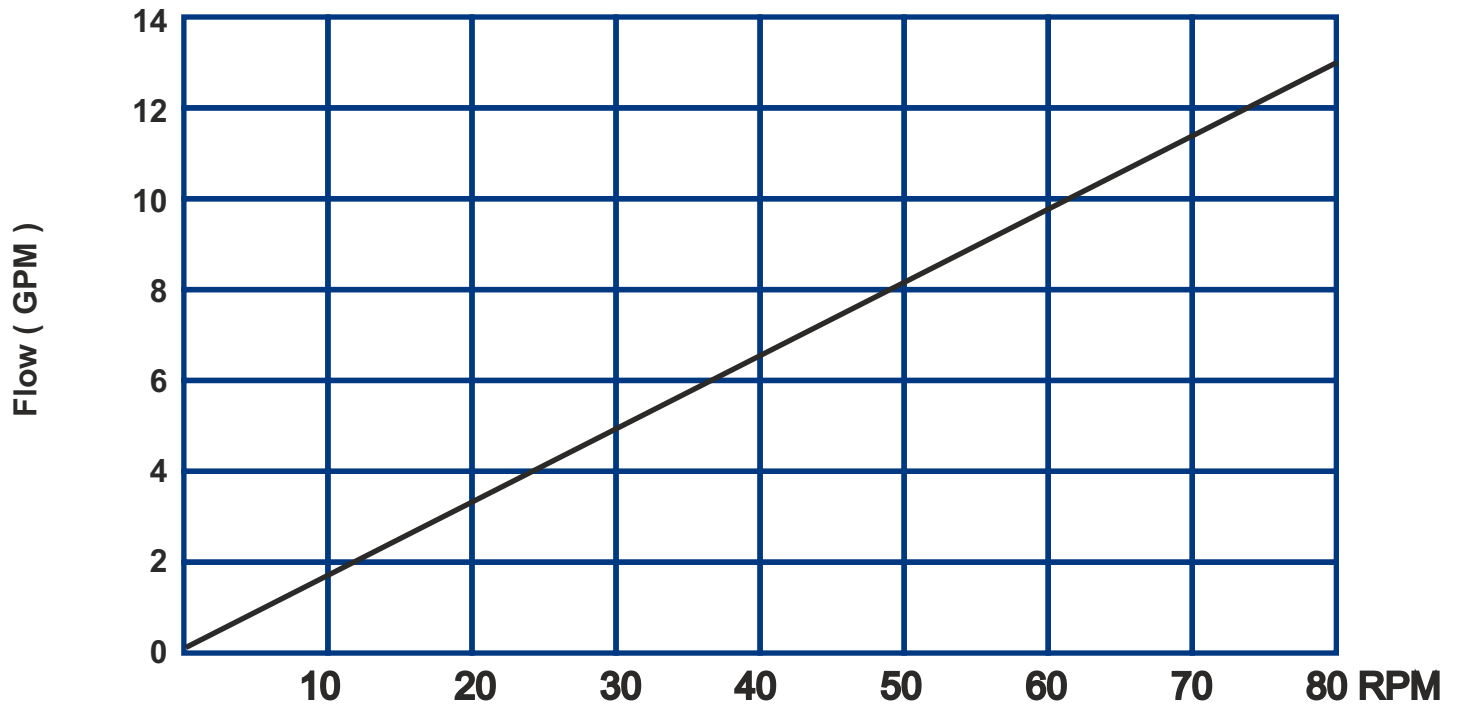

Torque (in·lbf)



Pressure (PSI)	Nominal Torque (in·lbf)
Minimum starting torque	2000
70	2000
105	2000
140	2100
215	2600

Performance curve - Model STP-40

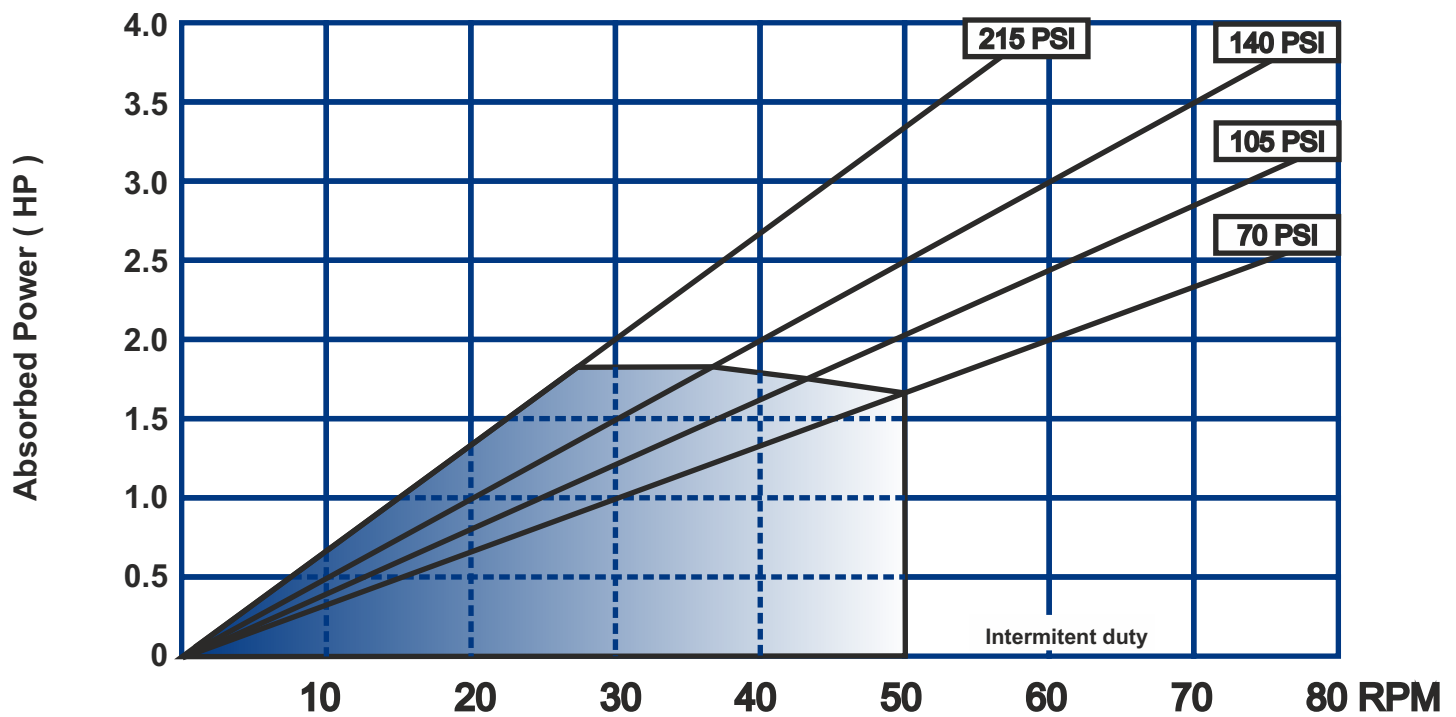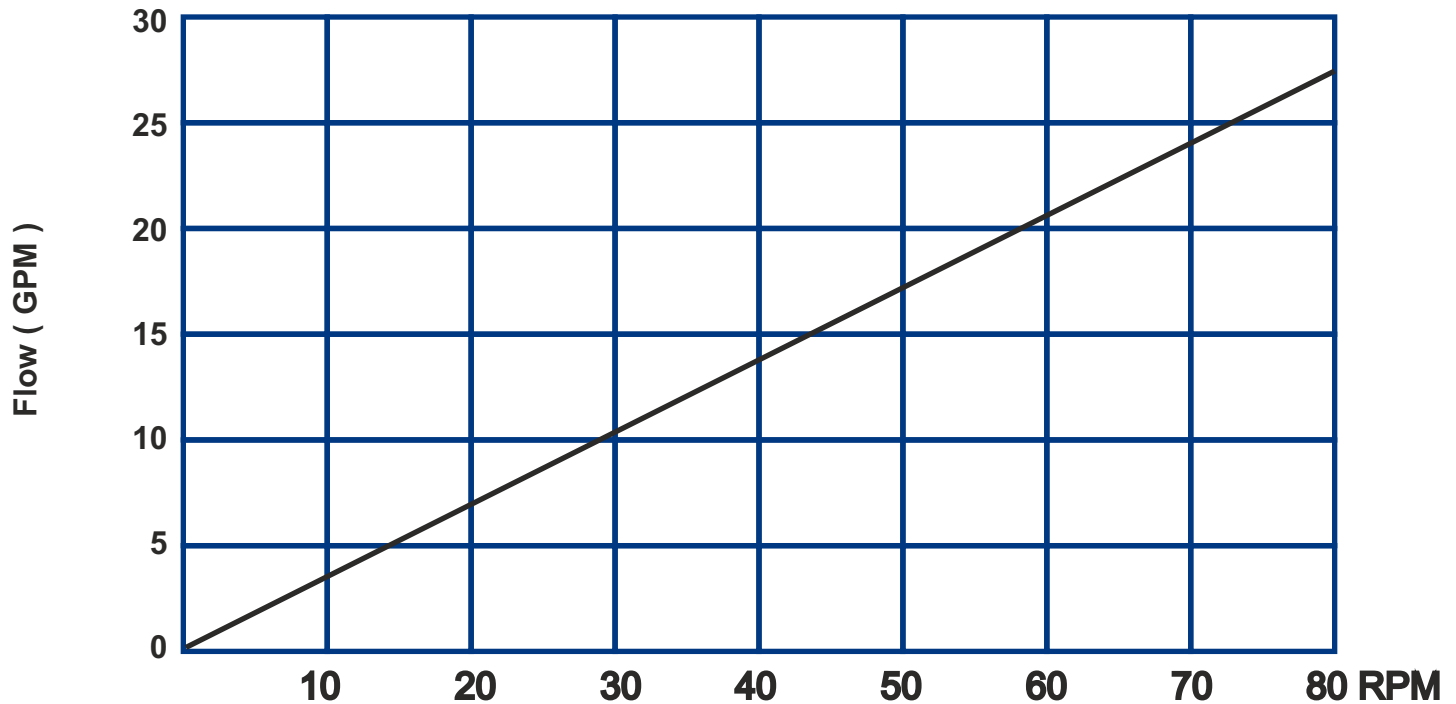



Pressure (PSI)	Nominal Torque (in·lbf)
Minimum starting torque	2750
70	2750
105	2750
140	3200
215	4300

Performance curve - Model STP-60

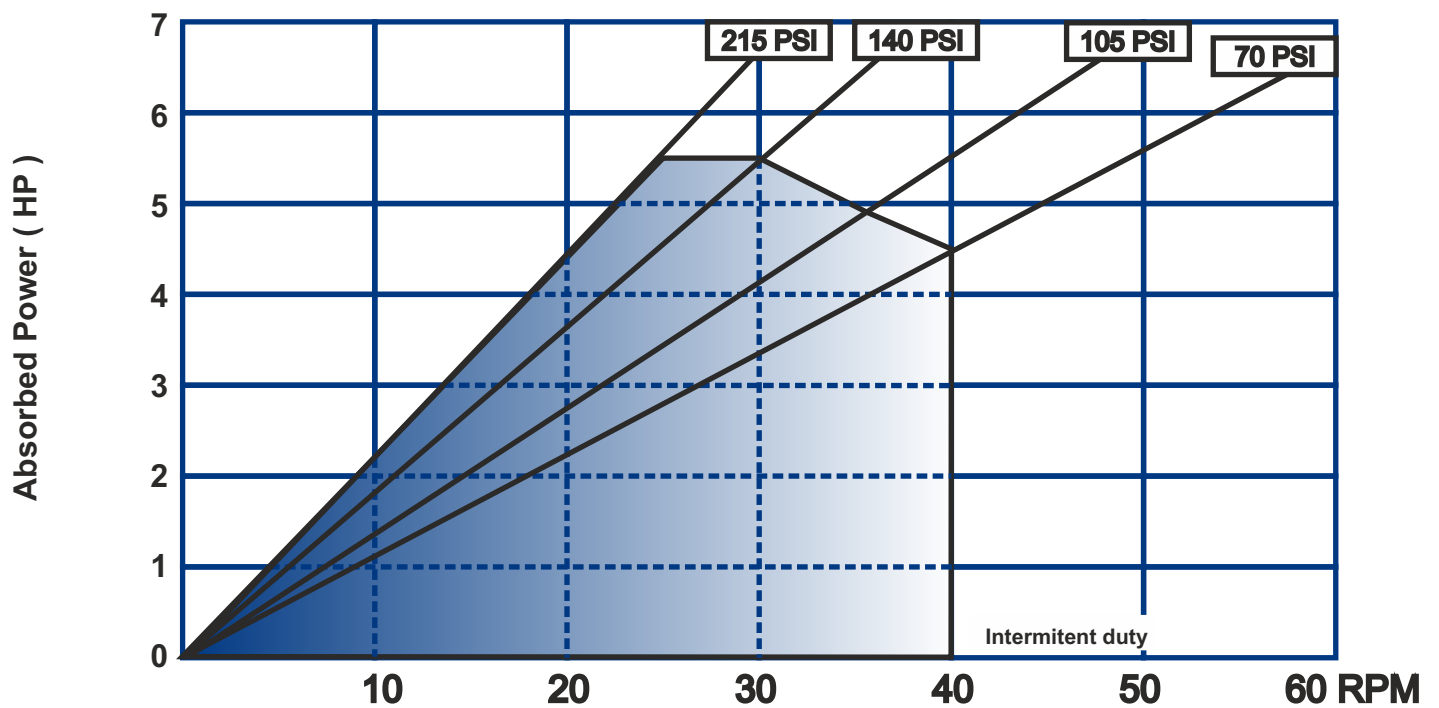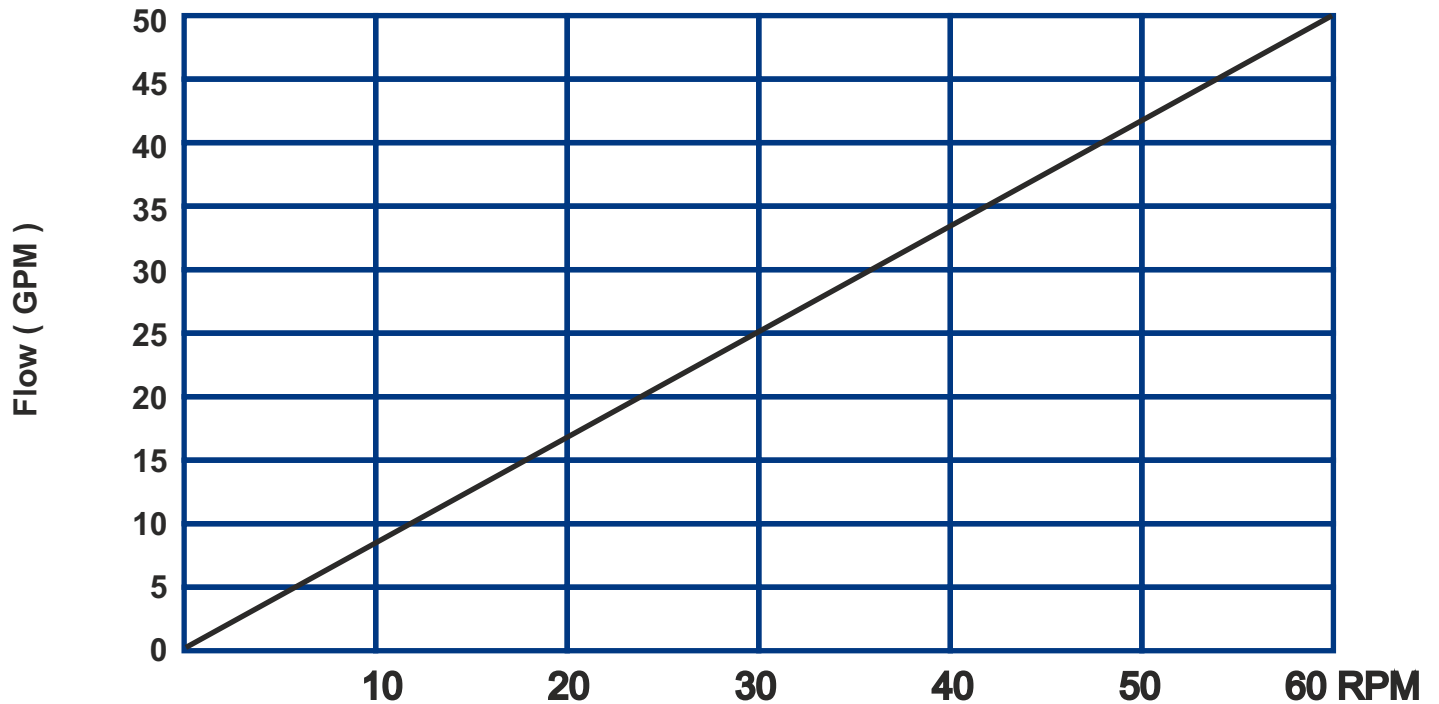



Pressure (PSI)	Nominal Torque (in·lbf)
Minimum starting torque	7000
70	7000
105	8800
140	11500
215	15100

Performance curve - Model STP-70

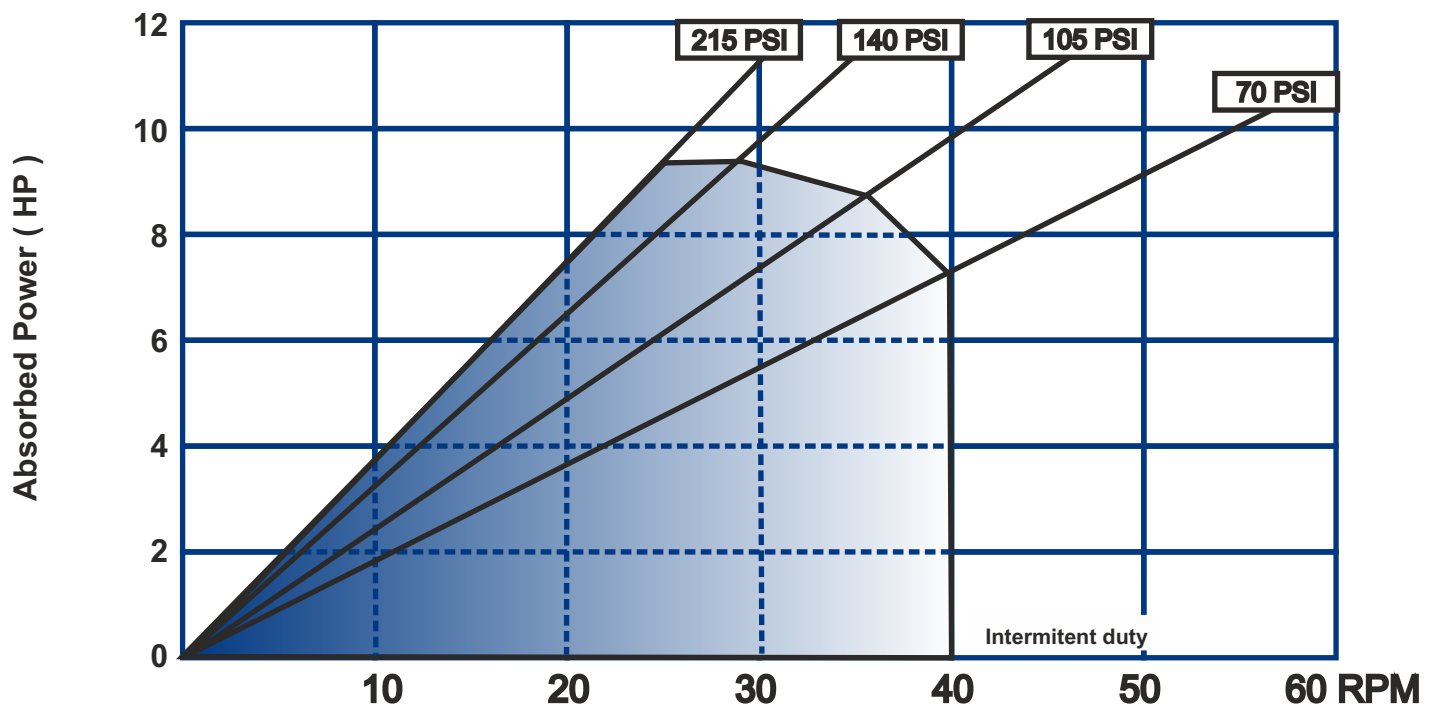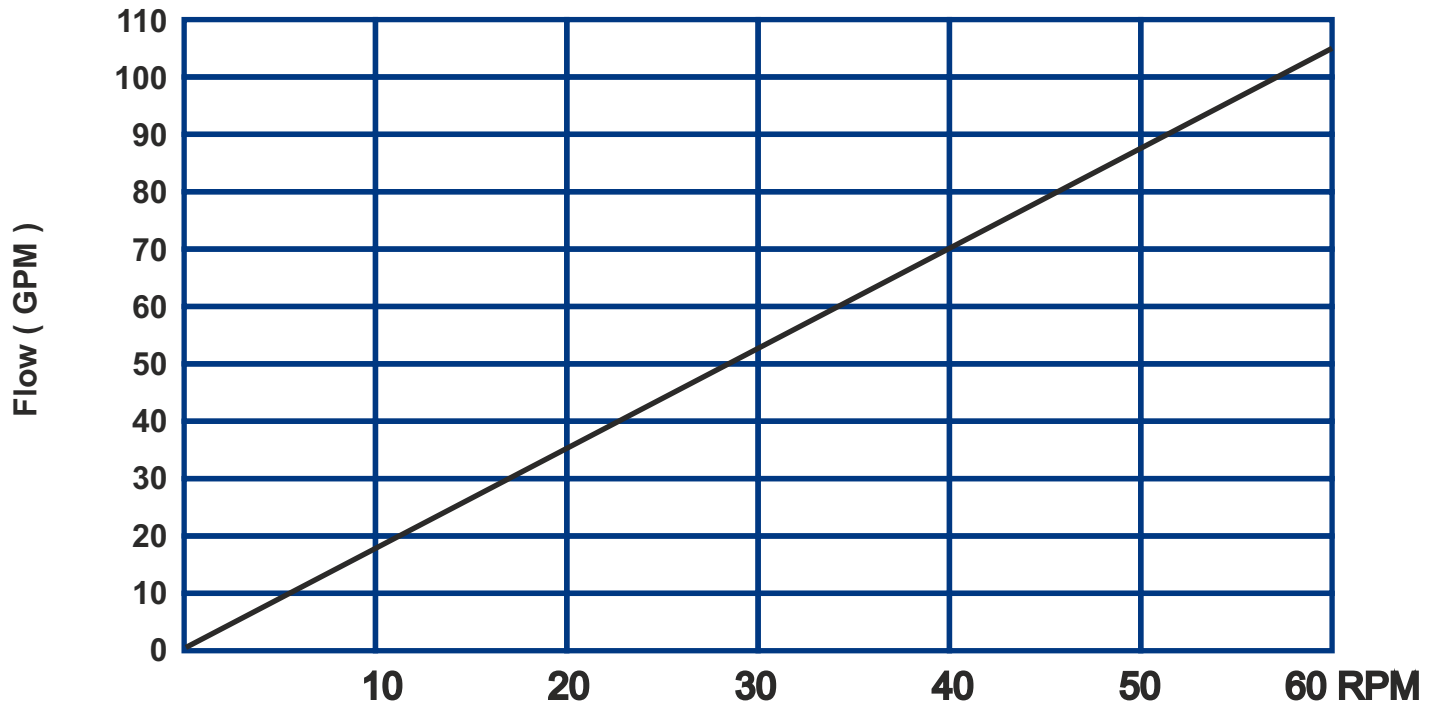



Pressure (PSI)	Nominal Torque (in·lbf)
Minimum starting torque	10600
70	11500
105	15900
140	20300
215	24000

Performance curve - Model STP-80

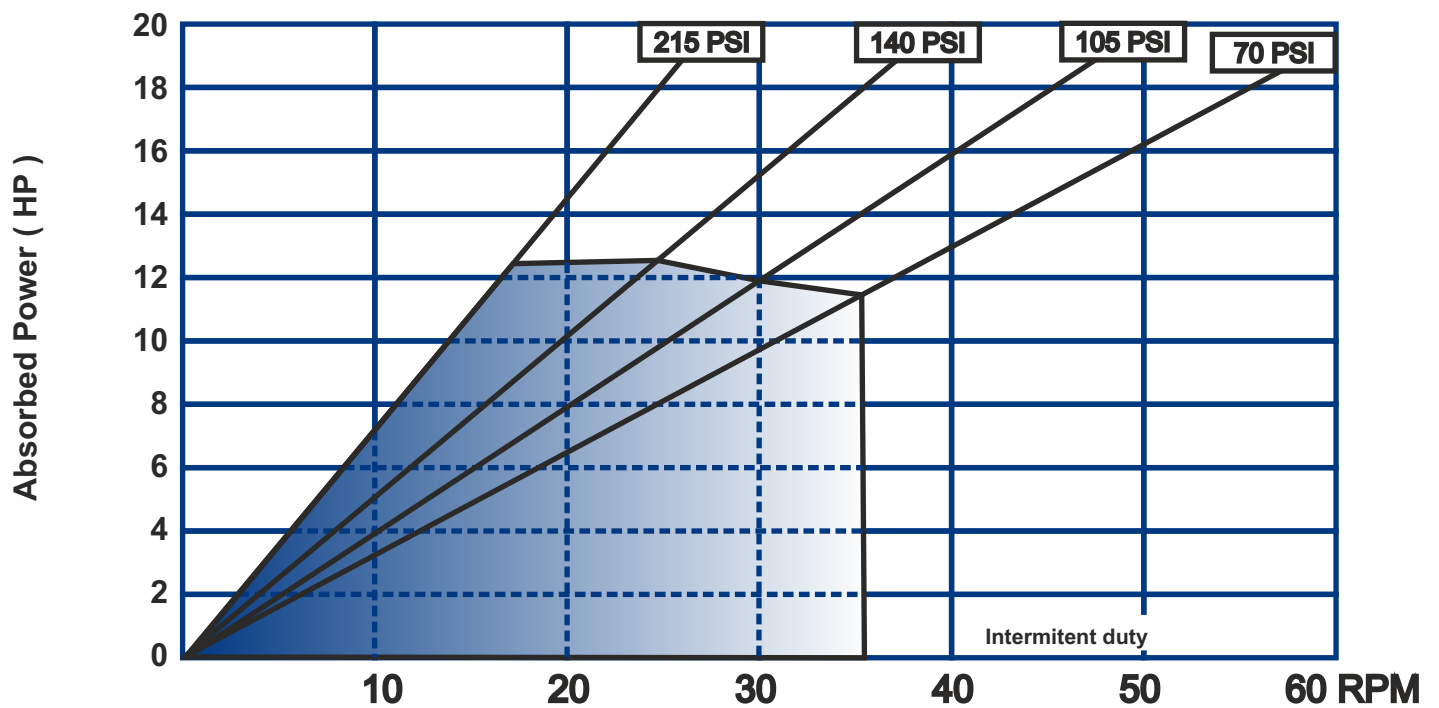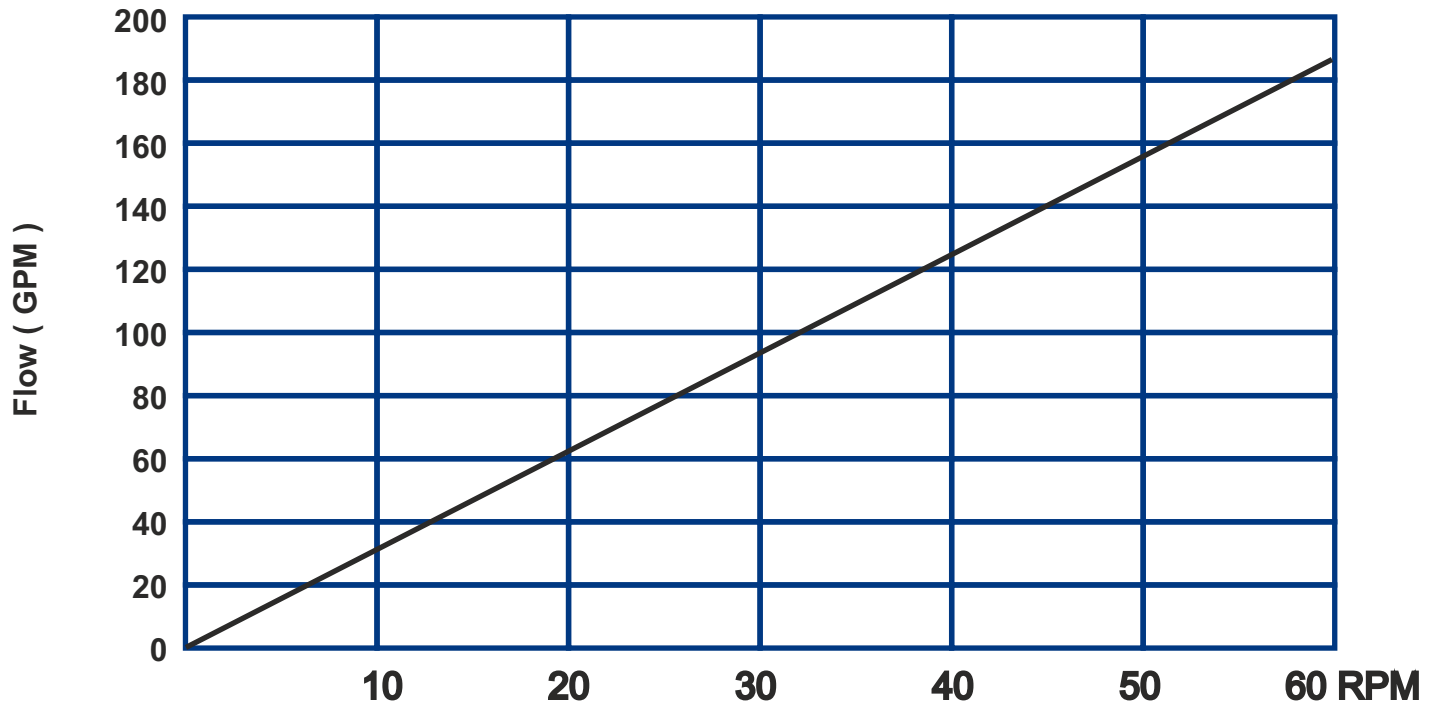

Pressure (PSI)	Nominal Torque (in·lbf)
Minimum starting torque	15000
70	20300
105	25600
140	32700
215	46100

Performance curve - Model STP-100

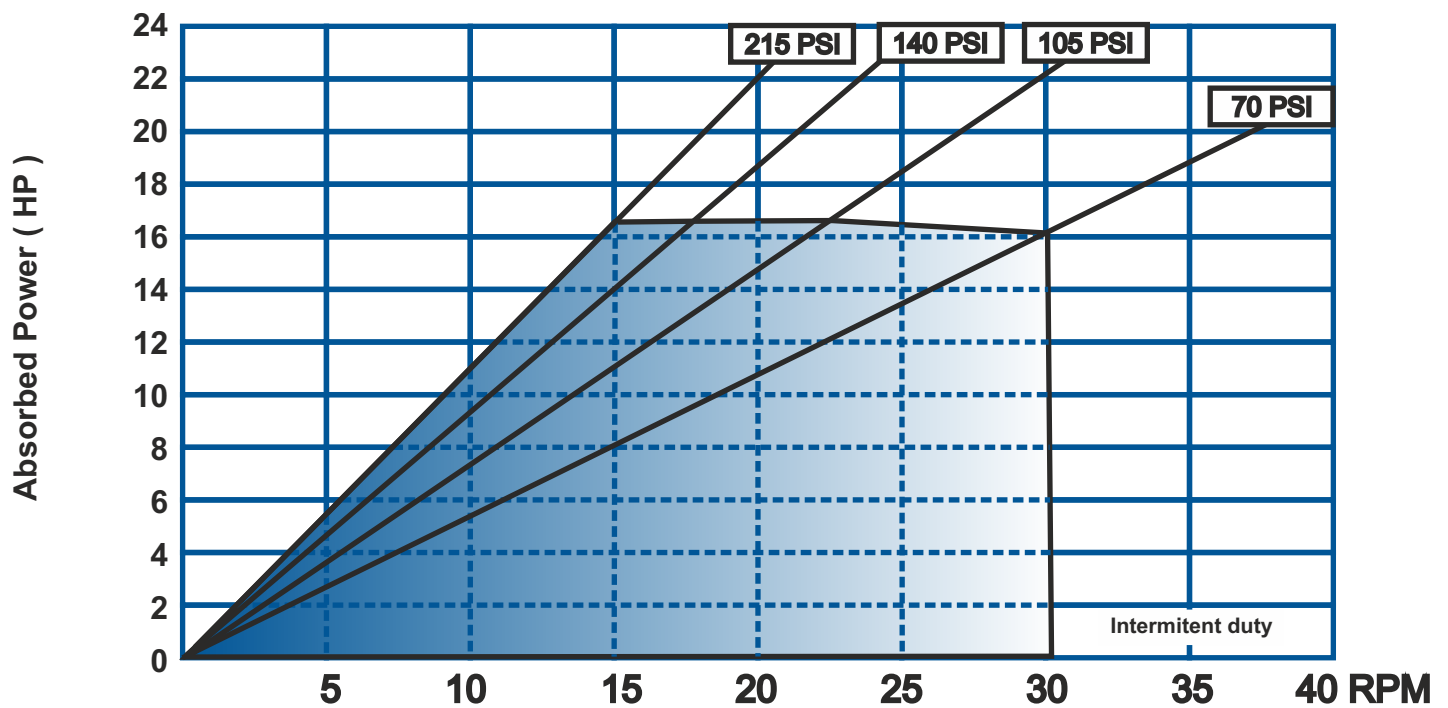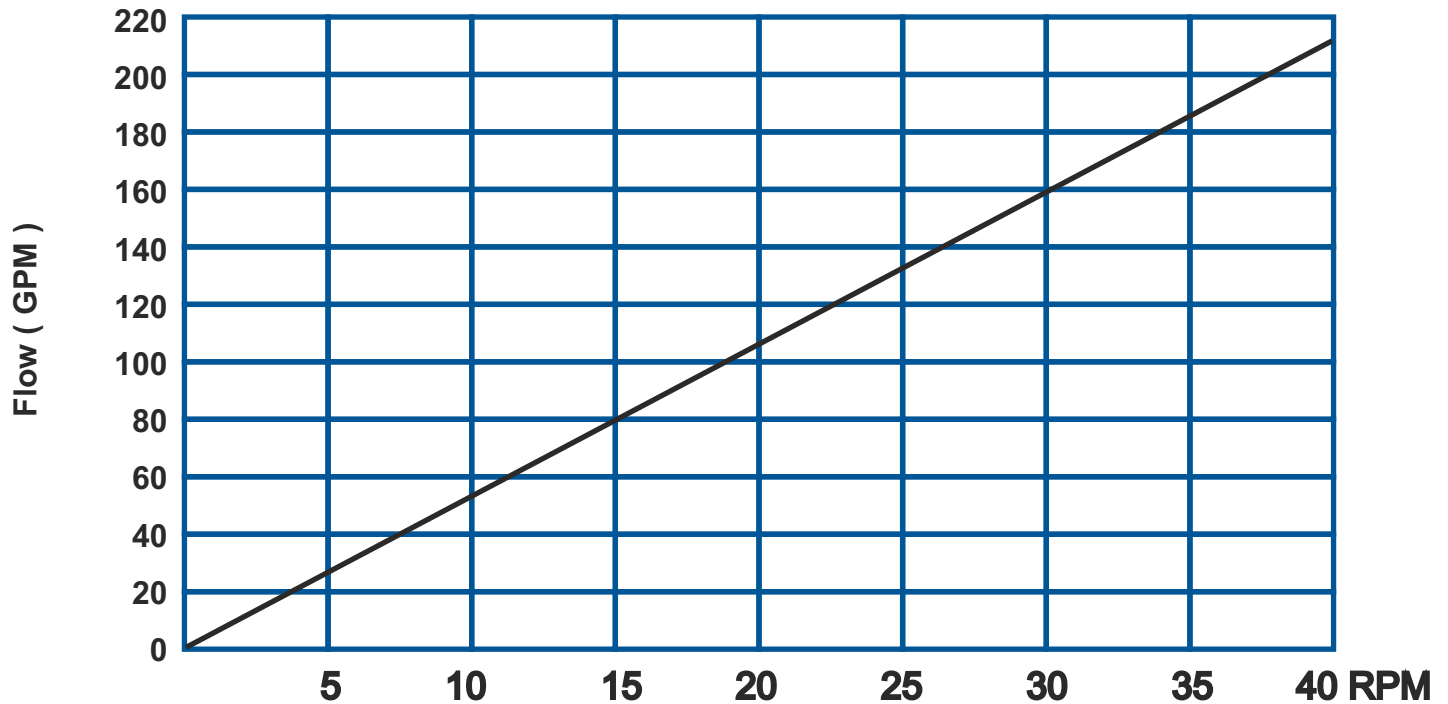

Pressure (PSI)	Nominal Torque (in·lbf)
Minimum starting torque	27400
70	33600
105	47700
140	59300
215	72000